

MELJAC 

NORTH AMERICA

READING LAMP
INSTALLATION GUIDE


TABLE OF CONTENTS

Back Box Installation Guide _____	03
Plate and Wiring Installation Guide _____	04
General Information _____	05
Plate Care & Maintenance _____	05
Warranty _____	05

INSTALLATION INSTRUCTIONS || BACK BOX INSTALLATION

BACK BOX INSTALLATION

- 1) Confirm that the appropriate back box is used for the corresponding Meljac plate size. See [Plate Size and Back Box Guide](#) for more information.
- 2) Back box must be mounted at a level position. Plate will not allow for leveling adjustment.
- 3) Back box should be installed flush with finished wall surface, and cannot be proud of the wall surface.

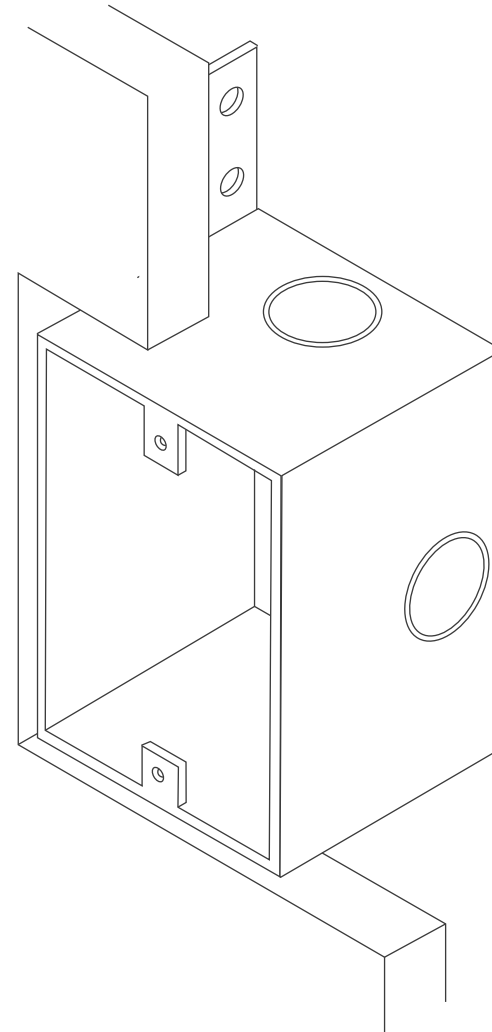


INSTALLATION INSTRUCTIONS || PLATE AND WIRING INSTRUCTIONS

PLATE AND WIRING INSTRUCTIONS

- 1) Plates must be installed on a flat and dry wall surface, after all finishing and painting is complete. Do not install on wet surface.
- 2) If painting work is required after installation, unscrew plate and set aside in a protected manner while work is done to avoid any damage to plate or finish. Never put any tape or adhesives on Meljac plate.
- 3) Use an appropriate T10 torx screwdriver for plate installation. Do not use an electric screwdriver or drill.
- 4) Connect line-voltage power to brown wire (load voltage in).
- 5) Connect neutral wire to blue wire.
- 6) Connect ground wire to ground post on plate.
- 7) Connect positive current wire (red) to middle switch contact (#2), ensuring that polarity is respected.
- 8) Confirm the positive current wire from the LED lamp is connected to top switch contact (#1 or #3).
- 9) Secure plate directly to junction box using supplied 6/32 screws.

If lamp will not turn on after connecting, check to ensure polarity.

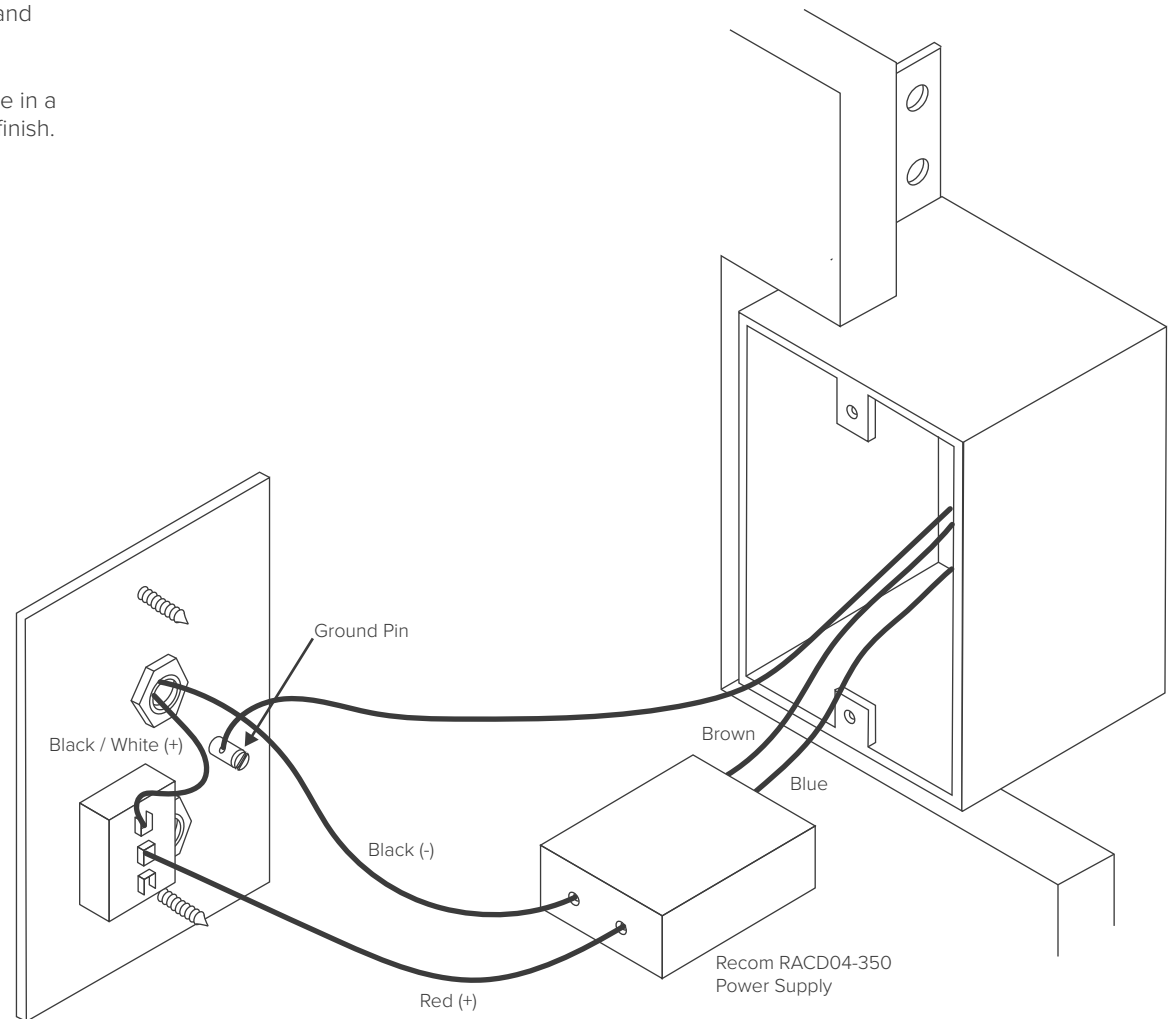

GENERAL INFORMATION

Product should be installed by a certified electrician or other qualified person, in accordance with local electrical codes and regulations.

CAUTION

To prevent shock or electrocution, always turn off electrical power at the main circuit panel before installation or maintenance.

PLATE CARE & MAINTENANCE

If painting work is required after installation, unscrew plate and set aside in a protected manner while work is done to avoid any damage to plate or finish. Never put any tape or adhesives on Meljac plate.

To protect the integrity of the finish, no chemicals or cleaning solutions should ever be used on Meljac plates. Clean with dry dust rags or microfiber cloths only.

WARRANTY

Lifetime Warranty. The device you have purchased is warranted under normal use against defects in workmanship and materials for as long as you own the device. If the device fails due to manufacturing defect during normal use, contact Meljac North America at (323) 421-7426, info@meljac-na.com, or 2566 1/2 Lake View Ave, Los Angeles, CA 90039.

ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. YOUR SOLE AND EXCLUSIVE REMEDY AGAINST MELJAC NORTH AMERICA UNDER ANY WARRANTY SHALL BE THE EQUIVALENT REPLACEMENT OF THE DEVICE. IN NO EVENT SHALL ANY WARRANTY APPLY TO ANY DEFECT ARISING OUT OF ANY ALTERATION OF THE DEVICE, IMPROPER INSTALLATION, MISUSE ABNORMAL USE OR NEGLIGENCE. IN NO EVENT SHALL MELJAC NORTH AMERICA LLC BE LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long implied warranties last and do not allow exclusion or limitation of incidental or consequential damages. Some of the above limitations or exclusions may not apply to every purchaser.

CONTACT

info@meljac-na.com

323-421-7426

meljac-na.com